

Chevron Overhead cabinet manual (1000 x 300 x 300)



Parts List



Item	Amount
Face frame & Doors	1
Side pannels	2
Center Divider	1
Base	2
Cross supports	4
Door up supports	2
Mounting Bracket	3
Square drill bit No2	1
Pocket hole screws	16
15mm screws	24
20mm Screws	4

Chevron Overhead cabinet manual (1000 x 300 x 300)



Tools Required



Item

Drill / Impact driver

Set square

Wood Glue

Phillips head screwdriver

Clamp (Optional)

IF SCRIBING:

JIG Saw


Circular saw

Chevron Overhead cabinet manual (1000 x 300 x 300)



Instructions

INSTALLING INTO A CAMPERVAN PLEASE FOLLOW THE VAN INSTALATION VIDEO FIRST found at <https://www.glaswolfconcepts.co.uk/fitting-instructions>

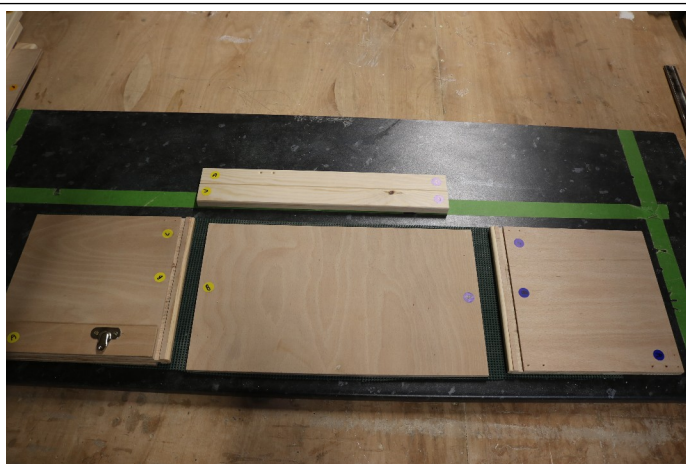

Lay out the base, side, center divider and cross supports with their corresponding colors and lettered counterpart stickers.



Apply a liberal amount of glue in the dado grooves. Any squeeze out should be wiped with a damp cloth.

Chevron Overhead cabinet manual (1000 x 300 x 300)



Slot the base into the dados. Apply glue to the ends of the cross support and place in position. Care should be taken to insure the correct cross support position and orientation do the pre-drilled holes line-up.



Using a carpenters square make sure the side and divider are plum and square to the base. Then using the No2 Squarehead bit provided fasten the pocket hole screws in place taking care not to overtighten.



Repeat the process for the other side.

Chevron Overhead cabinet manual (1000 x 300 x 300)



Line up the face frame with the cabinet carcass.



Using 15mm screws attach the face frame to the cabinet with the black corner brackets.

Using 20mm screws attach the face frame to the cabinet base using the Modesty jointing block.



With a Phillips head screwdriver attach the door supports to their corresponding mounting plates paying close attention to its orientation use picture as reference.

Chevron Overhead cabinet manual (1000 x 300 x 300)



Brackets have been provided to use as fixing points. These can be moved depending on the application. Additional fixing points can be added by screwing through the back and top cross supports if necessary